


## Grundfos LFE Cross Section

Type LFE, cross section and parts list

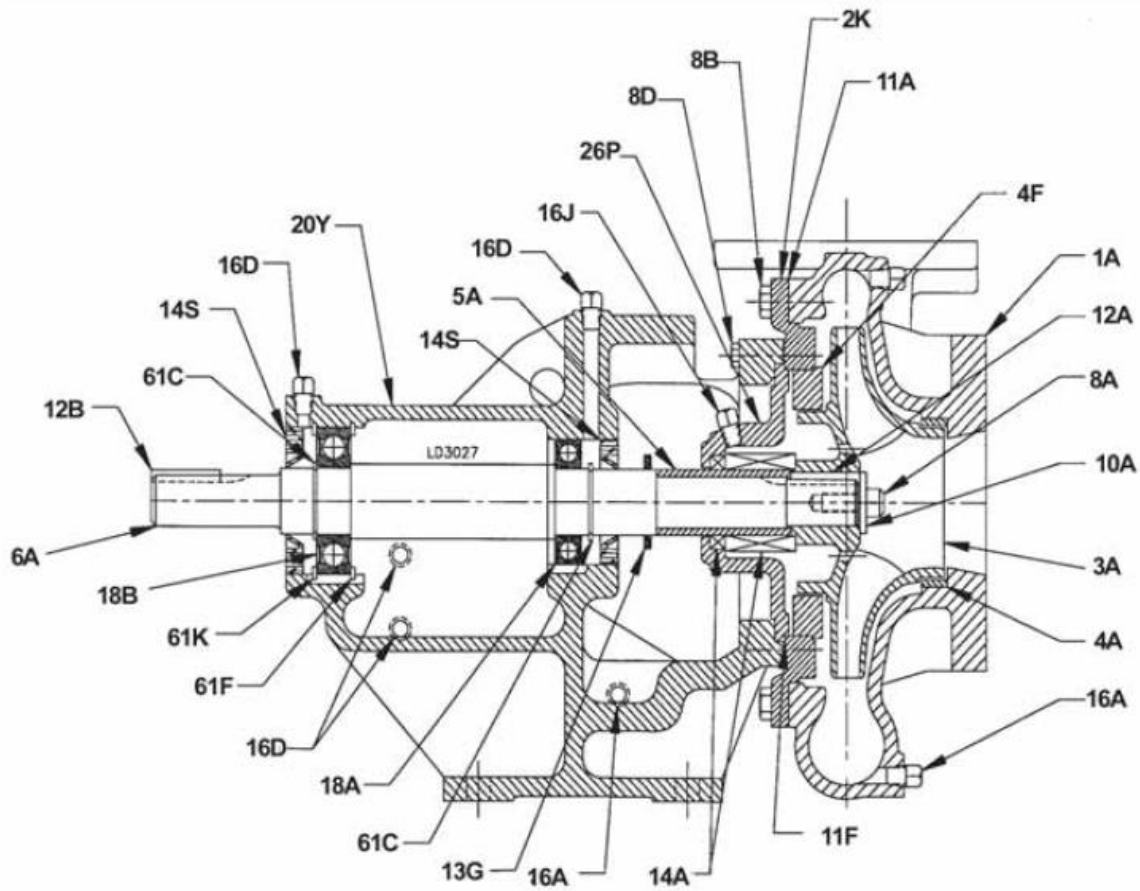

TM05 4796 3712

Item No.	Part name	Item No.	Part name	Item No.	Part name
1A	Casing	10A*	Washer, Packing	16L	Plug, Seal Chamber
2K	Backplate	10A	Washer, Impeller	18A	Bearing, Inboard
3A	Enclosed Impeller	11A	Gasket, Casing	18B	Bearing, Outboard
4A	Case Wear Ring	11F	Gasket, Backplate	20Y	Bearing Frame
4F**	Balance Ring	12A	Key, Impeller	22A*	Stud, Packing Gland
5A	Shaft Sleeve	12B	Key, Coupling	26P	Seal Housing
5L*	Lantern Ring	13A*	Packing	26U*	Packing Box
6A	Shaft	13G	Slinger	35F*	Nut, Packing Gland
7A*	Packing Gland	14A	Shaft Seal	61C	Snap Ring
8A	Cap Screw, Impeller	14S	Lip Seal	61J*	Snap Ring
8B	Cap Screw, Casing	16A	Plug, Drain		
8D	Cap Screw, Brg. Frame	16D	Plug, Grease/Oil Filter		

\* Packed Pumps Only

\*\* If Applicable