

# Grundfos Type VLSC Cross Section

Pos.	Description
1A	Volute
2N	Seal cap
3A*	Impeller
4A*	Case wear ring
4F	Balance ring
6A	Pump shaft
8B	Volute screw
8C	Pump shaft screw
8E	Coupling screw
8F	Coupling guard
8G	Locating ring screw
8H	Plate screw
8N	Motor screw
8I	CUE screw
11A*	Volute gasket
12B	Coupling key
14A*	Seal assembly
15A	Locating ring
16A	Pipe plug
17E	Seal cap o-ring
20J	Cast iron stand
21A	Motor bracket
22A	Seal cap studs
23D	Coupling halves
24H	Bushing
34B*	Impeller washer
34C	Pump shaft washer
34D	Coupling Washer
34G	Plate washer
34E	CUE flat washer
34F	Coupling guard
34H	CUE lock washer
35E	Coupling nut
35F	Seal cap nut
35G	Plate nut
35H	CUE nut
45A	Shock isolator
55A	Mounting plate
65A	Motor
75A	CUE

